
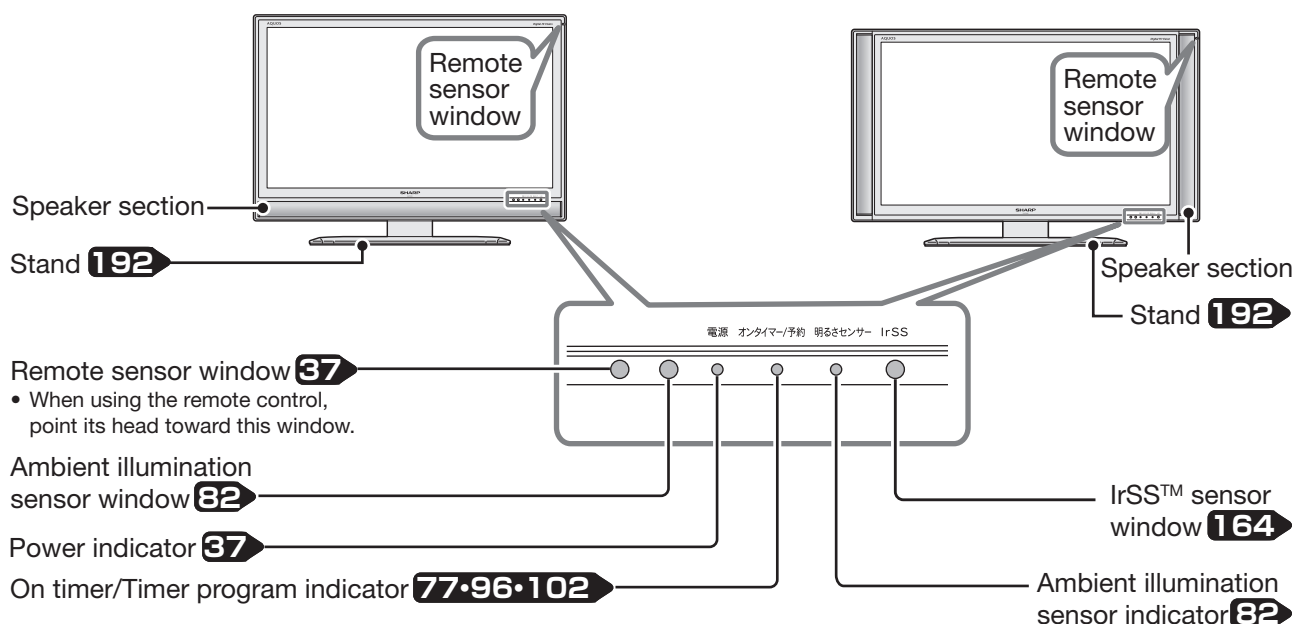


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


### Front view

**LC-37GX3W**

**LC-37GX4W**



### Top view

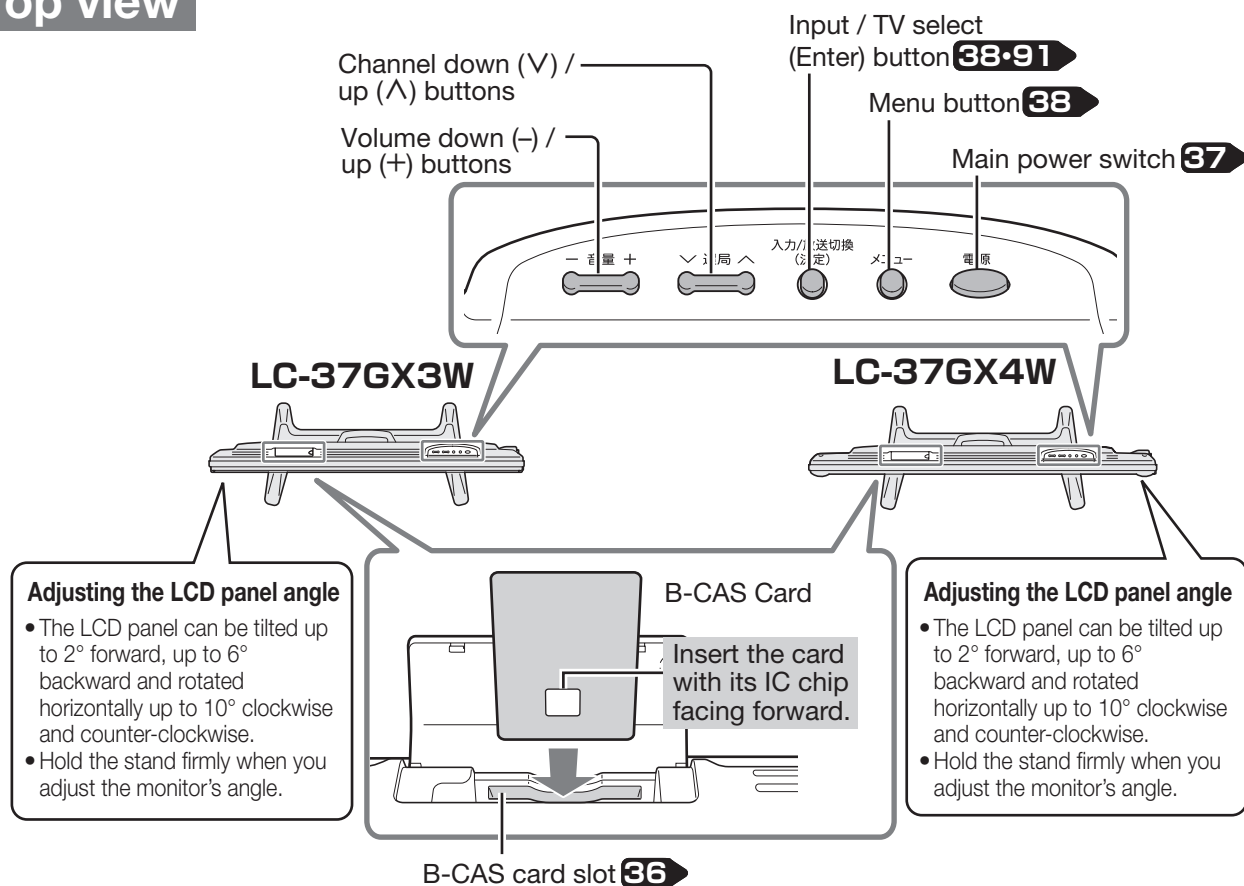

## Back view

i.LINK (TS) jack

**116**

LAN jack  
(10BASE-T/100BASE-TX)

**151**

Connect a PC with the  
DVI terminal, etc.

AV in 7 (DVI-I, Audio)

**134·138**

Center speaker jack

**128**

VHF·UHF antenna  
input terminal **30**

BS-CS 110 antenna  
input terminal **30**

AV in 1 **89**

Connect a recorder

Monitor out (REC OUT)/  
AV in 2

**89·97·99**

Connect a video game  
equipment, video camera, etc.

AV in 3 **89**

Connect a video game  
equipment, video camera, etc.

AV in 6 (HDMI)  
**89·90·107~109**

Headphones jack

**24·75**

Connect a Blu-ray  
Disc player,  
AV amplifier, etc.

AV in 4 and 5 (HDMI)

**89·90·107~109**

RS-232C **140**


Digital audio output

jack (optical) **108·109·126**

AV in 2 **89**

Connect the telephone line

Telephone line  
jack **145**

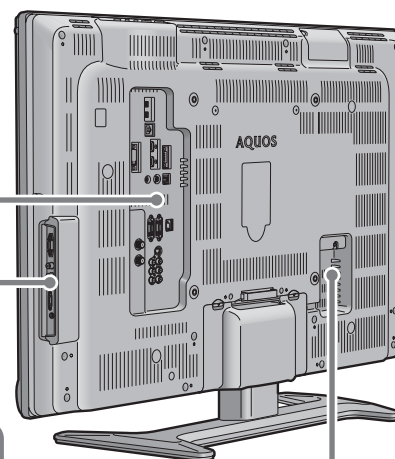

AC cord connector  
(AC 100V) **32**

Connect the AC cord

# Part Names – Remote Control Unit

## Active/Standby **37**

Press to engage the TV set in the active or standby mode.

## Display **58**

Press to display or turn off the channel call, etc.

## Familink **112 • 114**

Press to operate "Familink" Recorders connected via HDMI cables.

## Terrestrial analog select **58**

## Terrestrial digital select **58**

## BS select **58**

## CS select **58**

Select the CS digital channel for the first time. **35**

## d (linked data broadcast) **74**

Press to call the data broadcast linked with the current digital TV program.

## Volume up (+)/down (-)

Press to adjust the volume.

## Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Program info **74**

Press to display detailed information on the current digital program.

## EPG **62 • 64**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## Other on-air programs **63**

Press to display the EPG for currently on-air programs only (裏番組).

## Finish **38**

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## Screen mode **78 • 135**

Press to select the desired screen mode.

## AV mode select **80**

Press to select the picture/sound setting that best matches the current program.

## Freeze **73**

Press to freeze the picture.

## i.LINK **118**

Press to display the i.LINK control panel.

## CATV **59**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

## Favorite channel select/register **59**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

## Familink **111 • 112 • 114 • 115**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

## AQUOS.jp **154**

Press to connect to the internet.

## LCD display window **58**

## Sleep timer **130**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

## Digital channel number input **59**

Use to select a digital channel by entering the 3-digit channel number.

## Channel select **58**

- Press to select a channel.
- Use to input a number for various settings.

## Channel up (^)/down (v) **58**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

## Media select **58**

Press to select the desired media (TV, radio, or data).

## Input select **91**

Press to select the desired input.

## Menu **38**

Press to display or turn off the menu screen.

*The menus can be displayed in English. See **203** for instructions on how to switch the display language.*

## Cursor (up, down, left, right) **38**

Use to select a menu item, column, etc.

## Enter/Confirm **38**

Press to confirm a selected setting or menu item.

## Return **38**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

## Color **64 • 65 • 74**

Use to operate EPGs and data program screens.

## Picture select **71**

Press to select the desired picture when watching a digital multi-picture program.

## Caption **71**

Press to display, select, or turn off captions when watching a digital program with captions.

## Audio select **70 • 71**

Press to select the desired audio.

## Split screen **72**


Press to switch between the split screen mode and the normal screen mode.

## Operable screen **72**

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

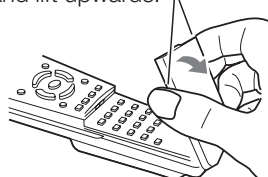

# Switching the Display Language to English

## メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



### ★ おしらせ

誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**

**1** **メニュー** Display the menu screen.  
メニューを表示する
- 2** Select “本体設定”(Setup)－“Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ

Enter.  
決定する
- 3** Select “English”.  
「English」を選ぶ

Enter.  
決定する

  - The menu screen is now displayed in English.  
画面表示が英語になります。
- 4** **終了** Finish this operation.  
終了する